





**XL Rubber Floor Cleaner** is a Rubber Floor Cleaner / Maintainer that can be mopped, sponged or auto scrubbed.

#### WHERE TO USE

**XL Rubber Floor Cleaner** is specially formulated for use on Rubber Floors.

### **APPLICATION**

# **Initial Cleaning**

Sweep the floor first using a dust mop or hard surface vacuum. Apply diluted solution of **XL Rubber Floor Cleaner** to new floor with mop or pump sprayer, allow to dwell for 5-15 minutes (Do Not allow solution to dry), scrub area as recommend by manufacturer, remove slurry with extraction machine or wet vacuum Rinse floor thoroughly with fresh water.

**RESTORATIVE CLEANING:** XL Rubber Floor Cleaner for routine mopping or auto scrubbing on soiled areas as needed. **RESTORATIVE CLEANING:** XL Rubber Floor Cleaner may be used for very aggressive cleaning. Apply liberal amount of diluted solution to soiled area. Allow to dwell, then agitate solution with rotary floor machine or automatic scrubber. Remove slurry with extraction machine or wet vacuum. Rinse the floor thoroughly with fresh water.

#### **MIXING DIRECTIONS**

**INITIAL/ROUTINE MAINTENANCE:** Use 2 to 4 ounces per gallon of cold water.

**RESTORATIVE CLEANING:** Use 4 to 6 ounces per gallon of cold water.

# **TECHNICAL SPECIFICATIONS**

GOLOR:	Glear	STURAGE (Unopened):	. 1 Year @ R.T.
FORM:	Liquid	BIODEGRADABLE:	. Yes
SCENT:	Mild	WEIGHT/GAL:	. 8
pH:	7.0	SHIPPING CLASS:	. None
FLASH POINT:	None	PACKAGING:	4x1 Gal. Case, 5 Gal. Pail
FOAM:	None	TYPE:	Cleaner
VISCOSITY:	Water Thin	DILUTION:	2 - 6 oz

FOR COMMERCIAL AND INDUSTRIAL USE ONLY

©2012 XL North, Fall River, MA 02722 USA

