



# Scotchgard™ Floor Protectors

## Stone application


### Preparation

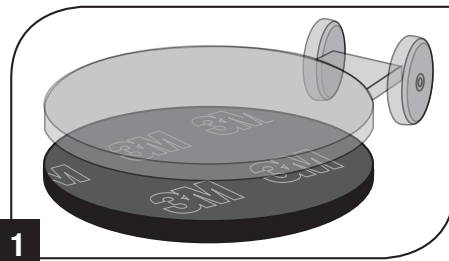


**1** Strip all old finish or other coatings from the floor using your chemical strippers. Clean, rinse and dry as appropriate.

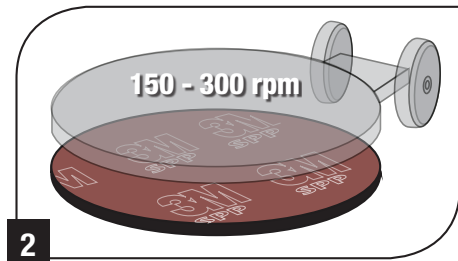

**2** Clean the floor with 3M™ Surface Preparation Pad using only water. Use low/standard speed machine (150-300rpm). Make 6 passes using plenty of water. To finish, remove water and dry the floor.

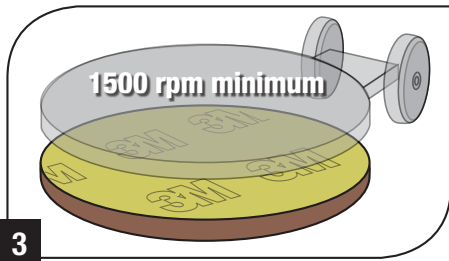


**3** Burnish the floor with 3M™ Scotch-Brite™ Sienna Diamond Floor Pad. Use a high speed machine (1500 rpm minimum) for 6 passes.  
TIP: Use the dark side of the pad facing the floor.

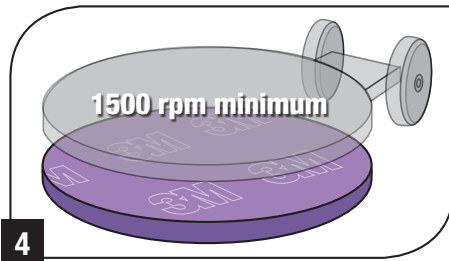


**4** Burnish the floor with dry 3M™ Scotch-Brite™ Purple Diamond Floor Pad. Use extra high speed machine (1500 rpm minimum) for 6 passes.  
TIP: Use the dark side of the pad facing the floor.

### Scotchgard™ Application

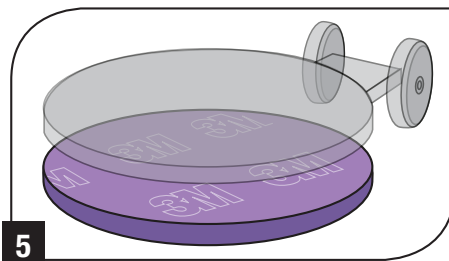


**5** Burnish the floor with dry 3M™ Scotch-Brite™ Purple Diamond Floor Pad. Use extra high speed machine (1500 rpm minimum) for 6 passes.  
TIP: Use the dark side of the pad facing the floor.

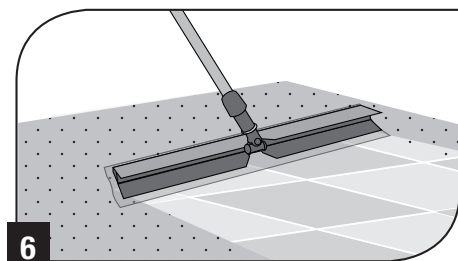

**6** Remove dust from the floor using 3M™ Easy Trap Duster.


CONTINUED OVERLEAF ▶▶



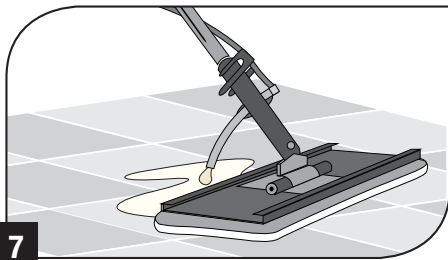

7


First pre-wet the pad and then apply a very thin, uniform coat of **3M™ Scotchgard™ Stone Floor Protector** using **3M™ Easy Shine Applicator Kit** with **3M™ Easy Shine White Pad**. Ensure no white marks are left on the floor and that full coverage has been achieved.

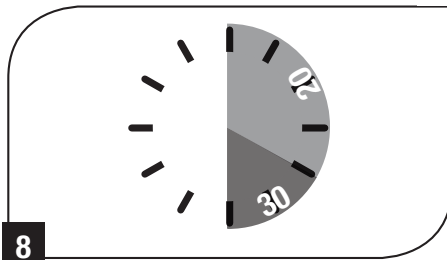

8

Allow 20 to 30 minutes to dry depending on the surface type and environment.


TIP: Touch dry plus five minutes.

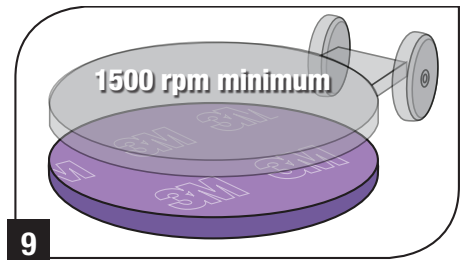

9


Burnish the entire floor with dry **3M™ Scotch-Brite™ Purple Diamond Floor Pad**. Use a high speed machine (1500 rpm minimum) for 6 passes.

TIP: Use the dark side of the pad facing the floor.

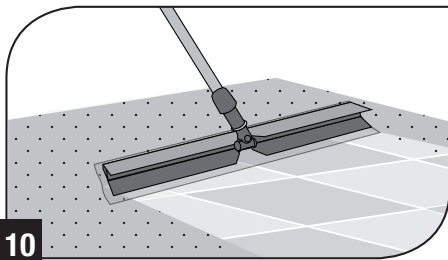


10

Remove dust from the floor using **3M™ Easy Trap Duster**.

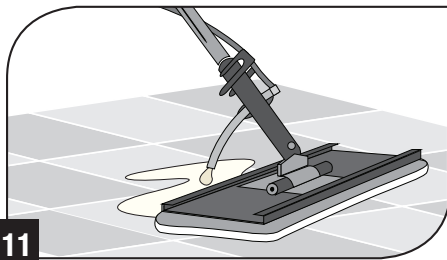

11


Apply a second very thin, uniform coat of **3M™ Scotchgard™ Stone Floor Protector** using **3M™ Easy Shine Applicator Kit** with **3M™ Easy Shine White Pad**.

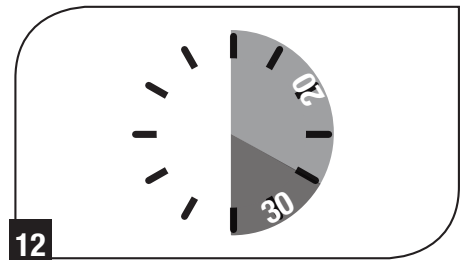

12

Allow 20 to 30 minutes to dry depending on the surface type and environment.


TIP: Touch dry plus five minutes.

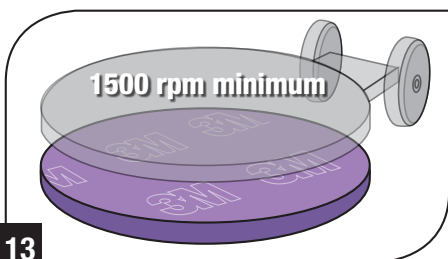

13


Burnish the entire floor with dry **3M™ Scotch-Brite™ Purple Diamond Floor Pad**. Use a high speed machine (1500 rpm minimum) for 6 passes.

TIP: Use the dark side of the pad facing the floor.

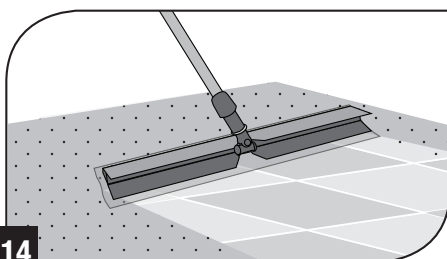

14

Remove dust from the floor using **3M™ Easy Trap Duster**.

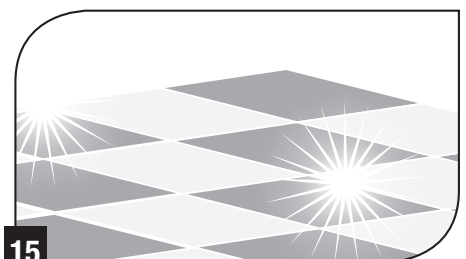

15

Your floor is now protected for 6-12 months (depending on traffic) before next application is required.

TIP: Next application requires just one coat and no stripping.

**3M**

**Building & Commercial Services  
3M United Kingdom plc**

Customer Service Centre  
Hudson Road  
Bedford MK41 0HR  
Phone: 01234 229496  
Fax: 01234 229594  
Email: [commcareuk@mmm.com](mailto:commcareuk@mmm.com)  
[www.3M.co.uk/Scotchgard](http://www.3M.co.uk/Scotchgard)

**3M Ireland Limited**

The Iveagh Building  
The Park  
Carrickmines  
Dublin 18  
Phone: 01 280 3555  
Fax: 01 280 3849

13466

Please recycle. Printed in UK.  
© 3M 2011. All rights reserved.